


Adjusting the Somfy Lt28 A73 12 volt motorized Silhouette.

1. Locate the control for the shade (wall switch remote etc.)
2. Locate the limit adjustment buttons on the motor.

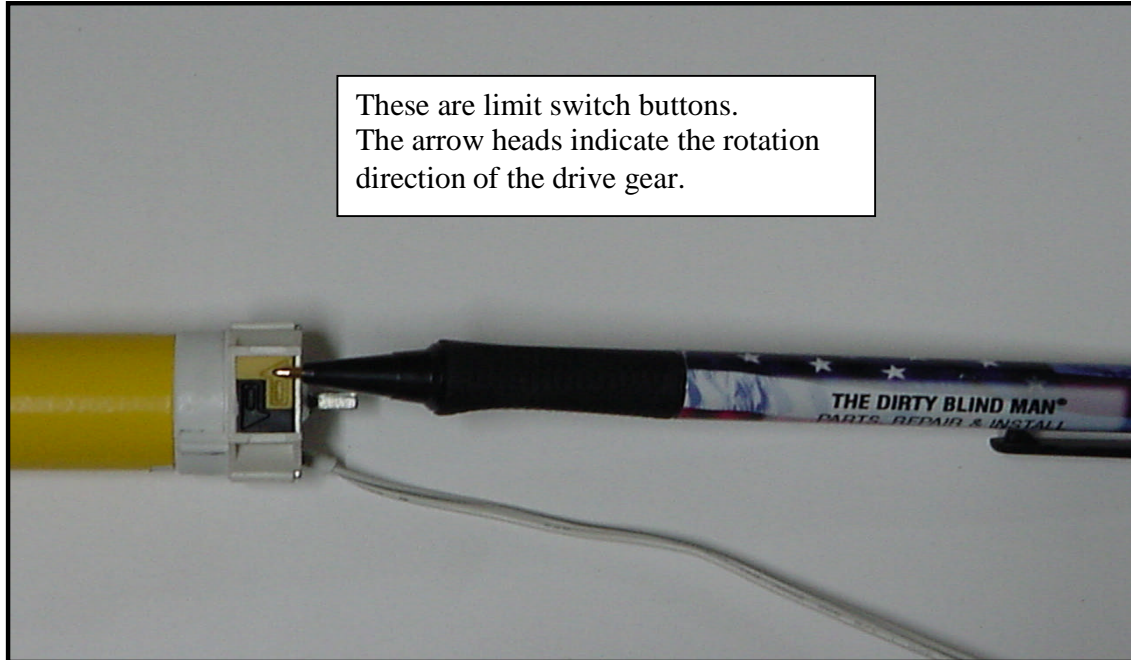

3. Depressing the limit switch allows the drive gear to turn in the depressed direction indefinitely or until the button is released.
4. Limits can be adjusted by lightly depressing the switch to make the shade jog.
5. Motors mounted on the right side of the shade = Upper – black Lower- yellow.
6. Motors mounted on the left side of the shade = Upper – yellow Lower – black.

Have a friend help with the operation of the wall switch. Set the shade to the middle position. Start by adjusting the LOWER limit first. This will provide practice for the upper limit. Depress the lower limit button all the way until it locks. Stay at the shade with your pen or pencil on the limit switch. Activate the shade and allow it to travel until it is approx. 3” from the bottom. Depress and unlock the limit switch. The shade will stop traveling down. Lightly jog the shade into desired position. Do this by slightly depressing the limit switch.

Adjusting the Upper limit requires a steady hand, over rotation may break the drive gear.

If you have any questions or concerns just let me know.

If you would like to alter them in the future just let me know & I will type it up.

If you need them cleaned or repaired just let me know.

Thank You very much for contacting me.

Travel Safe,

Tom

DBM

www.dirtyblindman.com

Copyright © 1996-2009 **The Dirty Blind Man®LLC.**

©1997,2009 Dirty Blind Man® Registered Trademark of Dirty Blind Man LLC USA & Foreign Patents Pending